


---

# ***Enclosure TS-530 User Manual***

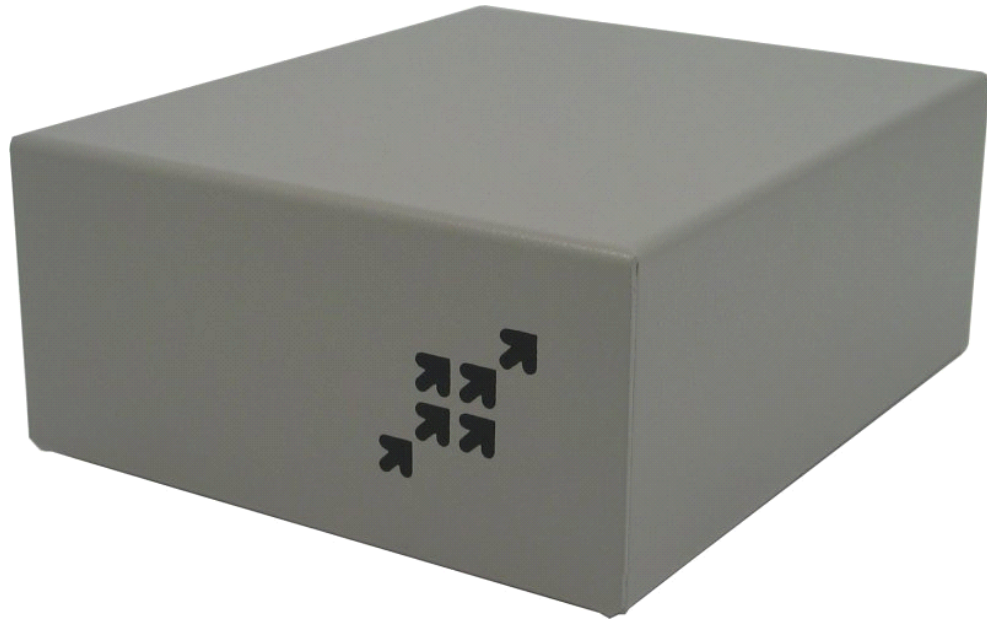

**16525 East Laser Drive  
Fountain Hills, AZ 85268**

**TEL 480.837.5200  
FAX 480.837.5300**

[info@embeddedx86.com](mailto:info@embeddedx86.com)

<http://www.embeddedx86.com/>



© COPYRIGHT 1998 - 200;

Technologic Systems Inc.  
Enclosure 530 User Manual  
Rev. 1.4  
Jupg 200;



**Note**

All modifications from previous versions are listed in Appendix B.

---

## Table of Contents

<b>Product Overview</b> .....	<b>4</b>
<b>Introduction</b> .....	<b>4</b>
<b>Features and Benefits</b> .....	<b>4</b>
<b>Related Products</b> .....	<b>4</b>
<b>Software and Support</b> .....	<b>4</b>
<b>Installing the Enclosure</b> .....	<b>5</b>
<b>Electrostatic Discharge (ESD) precautions</b> .....	<b>5</b>
<b>Setup and Installation Instructions</b> .....	<b>5</b>
Setup Procedure .....	5
Disconnecting AC Power.....	5
<b>Components</b> .....	<b>6</b>
<b>Standard Headers and Connectors</b> .....	<b>6</b>
Front Panel.....	6
Rear Panel .....	6
COM1 9-Pin SubD Outs Table .....	7
COM2 9-Pin SubD Outs Table .....	8
<b>Product Specifications</b> .....	<b>10</b>
<b>Dimensions</b> .....	<b>10</b>
<b>Cabling</b> .....	<b>10</b>
<b>Environmental</b> .....	<b>10</b>
<b>Options and Other Features</b> .....	<b>11</b>
<b>Limited Warranty</b> .....	<b>12</b>
<b>Repairs</b> .....	<b>12</b>
<b>Not Covered</b> .....	<b>12</b>
<b>Out-of-Warranty Repairs</b> .....	<b>12</b>
<b>Regulatory Notices</b> .....	<b>13</b>
<b>FCC Advisory Statement</b> .....	<b>13</b>
<b>Appendix A: Enclosure Views</b> .....	<b>14</b>
<b>Appendix B: User Manual Revisions</b> .....	<b>15</b>
<b>Contact Information</b> .....	<b>16</b>

## Product Overview

### Introduction

The Technologic Systems TS-ENC530 is a metal enclosure designed to house the [TS-3300](#) or [TS-5300](#) single-board computers and two PC/104 peripheral boards. This manual is intended to provide the user with an overview of the enclosure's features, benefits, specifications, and set up procedures. It also contains important safety information.

### Features and Benefits

- The switching power regulator efficiently converts 12-38 VDC to regulated +5 VDC required by the SBC
- COM ports adapted to standard 9-pin Sub-D
- Status LED's for Ethernet port are visible
- Power Good LED visible on the rear panel
- Surge suppression on DC power input
- Sturdy metallic design reduces noise
- Dimensions of the enclosure are 2-3/8" x 5" x 6"

### Related Products

The TS-ENC530 enclosure is designed for the following single-board computers:

[TS-3300](#)

[TS-5300](#)

### Software and Support

- Free system software and documentation updates available on our web site
- Free technical support by phone, fax, or email
- 30-day, money back guarantee on evaluation units
- One-year, full warranty

## Installing the Enclosure

### Electrostatic Discharge (ESD) precautions

Before performing any set up or placement procedures, take the precautions outlined in this section.



#### **Important**

Be sure to take appropriate Electrostatic Discharge (ESD) precautions.

Disconnect the power cable at the rear panel of the enclosure before moving, cabling, or performing any set up procedures.

---

### Setup and Installation Instructions

Follow these guidelines for safety and maximum product performance:

- Observe local health and safety requirements and guidelines for manual material handling.
- Set the enclosure on a level surface with adequate ventilation.
- Ensure the rubber feet are used for protection and stability on level surfaces.
- Wall-mount the unit if placement on a level surface is not available, or desired.

### Setup Tools

Depending on the placement and cabling of the enclosure, you may need the following tools:

- Small flat-blade screwdriver
- Small Phillips screwdriver

### Setup Procedure

After locating, setting up, grounding, and cabling the enclosure:

1. Apply power to the unit.  
The amber-colored LED on the rear panel should be lit.
2. Monitor COM2 using a terminal emulator to verify that the enclosure is operating properly.

### Disconnecting AC Power

1. Unplug the power cord from the power source.
2. Disconnect the power cord from the rear panel of the enclosure.


## Components

### Standard Headers and Connectors

#### Front Panel

See Appendix A for a view of the enclosure's front panel.

#### Rear Panel

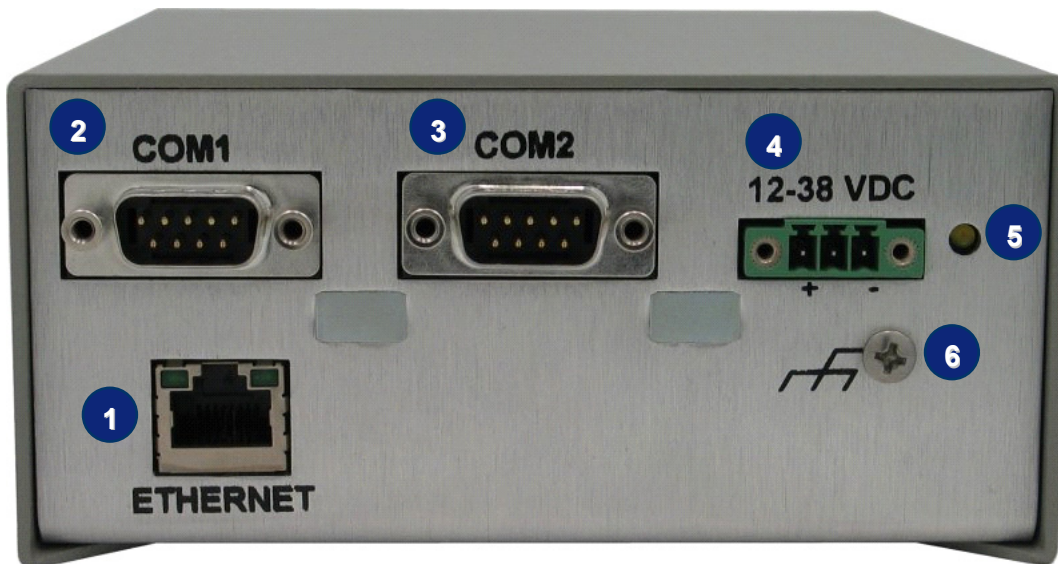


TS Enclosure 530 Rear Panel Connectors

The rear panel of the metal enclosure has four connectors and two additional elements, as indicated in the above view. Identifiers, and a description for each, are listed in the tables below.

Identifier	Connector Description
1	Ethernet
2	COM1
3	COM2
4	12-38VDC

#### Additional Elements

Identifier	Description
5	Power Indicator LED
6	Chassis Grounding Lug

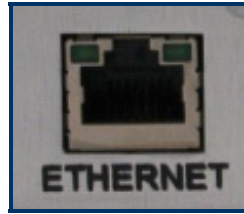

Enclosure TS-530 Ethernet Port

- Ethernet:** The Ethernet connector is a standard RJ-45 socket. It can be used to connect a standard 10baseT Ethernet cable into the enclosed EPC.



Enclosure TS-530 COM1 Port

- COM1:** COM1 is brought in from the enclosed SBC. This 9-pin SubD connector is industry standard for a PC. The TxD, RxD, RTS, CTS, and ground pins are supported for RS-232 communications.

See the table below for RS-485 operation.

### COM1 9-Pin SubD Outs Table

Half Duplex RS-485		RS-232		Full Duplex RS-485	
9-Pin SubD	Signal	9-Pin SubD	Signal	9-Pin SubD	Signal
1	RX/TX +	1	Receive data	1	TX +
2		2	Transmit data	2	
3		3	Ground	3	
4		4	Request to Send	4	RX +
5	Ground	5	Clear to Send	5	Ground
6	RX/TX -	6		6	TX -
7		7		7	
8		8		8	
9		9		9	RX -



Enclosure TS-530 COM2 Port, Pin 1

- **COM 2:** COM2 is brought in from the base SBC. This 9-pin SubD connector is industry standard for a PC. The TxD, RxD, RTS, CTS, and ground pins are supported for RS-232 communications.

**COM2 9-Pin SubD Outs Table**

<b>RS-232</b>	
<b>9-Pin SubD</b>	<b>Signal</b>
<b>1</b>	
<b>2</b>	Receive data
<b>3</b>	Transmit data
<b>4</b>	
<b>5</b>	Ground
<b>6</b>	
<b>7</b>	Request to Send
<b>8</b>	Clear to Send
<b>9</b>	




Enclosure TS-530 12-38 VDC Connector

- **12-38VDC:** The three-pin connector accepts 12-38 VDC of external power to supply power to the board.



Power Indicator Light

- **Power Indicator Light:** The amber-colored LED indicator on the rear panel, shown highlighted above in red, is the power LED. It is lit whenever power is applied to the unit.

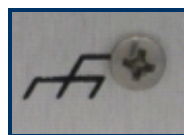

Chassis Grounding Lug



- **Chassis Grounding Lug:** The lug labeled with the chassis ground symbol is used to ground the chassis (optional).



---

**Note**

Connect this to earth ground during installation.

---

## Product Specifications

### Dimensions

The TS Enclosure 530 measures 2-3/8" x 5" x 6"

### Cabling

- A mating power connector is supplied with the enclosure
- A null modem cable is available as CB7-05

### Environmental

To ensure optimum product operation you must maintain the operational environmental specifications listed in the table below.

<b>Environmental Specifications</b>	<b>Standard Temp Products</b>	<b>Extended Temp Products</b>
<b>Ambient Temperature</b>	0 - 60° C  The internal temperature must not exceed +70° C.	Allow for a much greater range.  <b>Note:</b> Refer to your product manual, or contact Customer Service at Technologic Systems if the environmental temperature of the location is in doubt.
<b>Relative Humidity</b>	Not to exceed 90% noncondensing	Not to exceed 90% noncondensing.

## Options and Other Features

- RS-485 is optional on COM1
- A wall-mounted power supply is available for this product

## Limited Warranty

Technologic Systems warrants this product to be free of defects in material and workmanship for a period of one year from date of purchase.

## Repairs

During this warranty period Technologic Systems will repair or replace the defective unit in accordance with the following process:

A copy of the original invoice must be included when returning the defective unit to Technologic Systems, Inc. at the address below.

## Not Covered

This limited warranty does not cover damages resulting from lightning or other power surges, misuse, abuse, abnormal conditions of operation, or attempts to alter or modify the function of the product.



### Important

This warranty is limited to the repair or replacement of the defective unit. In no event shall Technologic Systems be liable or responsible for any loss or damages, including but not limited to any lost profits, incidental or consequential damages, loss of business, or anticipatory profits arising from the use or inability to use this product.

---

## Out-of-Warranty Repairs

Repairs made after the expiration of the warranty period are subject to a repair charge and the cost of return shipping.

Please contact Technologic Systems to arrange for any repair service and to obtain repair charge cost information.

**16525 East Laser Drive  
Fountain Hills, AZ 85268**

**TEL 480.837.5200  
FAX 480.837.5300**

<http://www.embeddedx86.com/>

## Regulatory Notices

### FCC Advisory Statement

#### **! Warning**

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used properly (that is, in strict accordance with the manufacturer's instructions), may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the owner at his own expense will be required to correct the interference.

If this equipment does cause interference, which can be determined by turning the unit on and off, the user is encouraged to try the following measures to correct the interference:

1. Reorient the receiving antenna.
2. Relocate the unit with respect to the receiver.
3. Plug the unit into a different outlet so that the unit and receiver are on different branch circuits.
4. Ensure that mounting screws and connector attachment screws are tightly secured.
5. Ensure that good quality, shielded, and grounded cables are used for all data communications.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The following booklets prepared by the Federal Communications Commission (FCC) may also prove helpful:


- **How to Identify and Resolve Radio-TV Interference Problems** (Stock No. 004-000-000345-4)
- **Interface Handbook** (Stock No. 004-000-004505-7)

These booklets may be purchased from the Superintendent of Documents, U.S. Government Printing Office, Washington, DC 20402

## Appendix A: Enclosure Views



Enclosure TS-530 Front-Top View

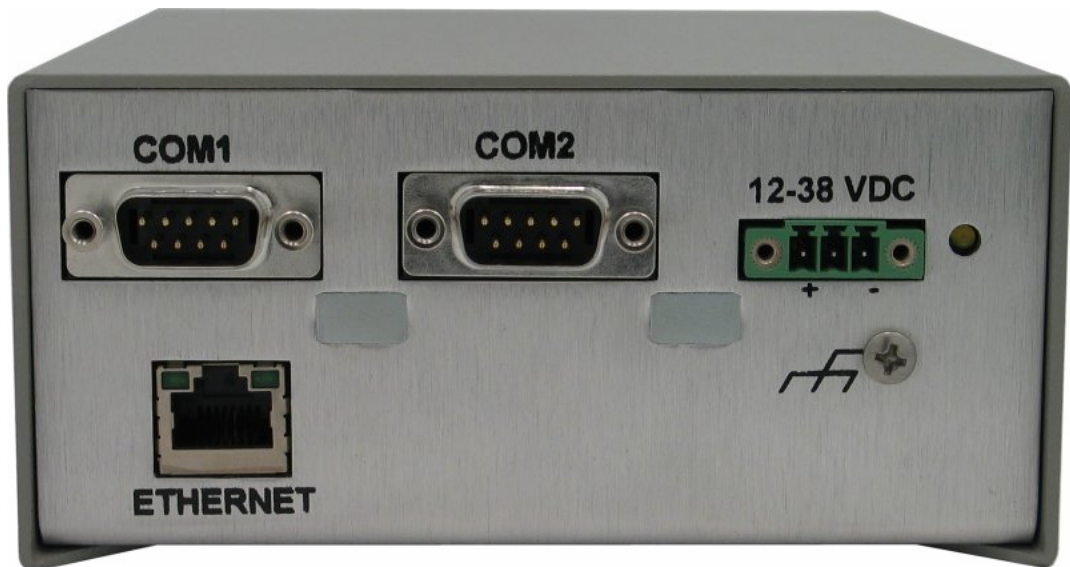

Enclosure TS-530 Rear Panel View

## Appendix B: User Manual Revisions

<b>Date of Issue/Revision</b>	<b>Revision Number</b>	<b>Comments</b>
July 2004	1.0	First release
July 2008	1.1	Fixed broken web links
June 2009	1.2	Updated mailing address



**16525 East Laser Drive  
Fountain Hills, AZ 85268**

**TEL 480.837.5200  
FAX 480.837.5300**

[info@embeddedx86.com](mailto:info@embeddedx86.com)

<http://www.embeddedx86.com/>